PLUG WIRING (UK & IRELAND)

This appliance is fitted with a BS 1363 13-amp plug. If you have to replace the fuse, only those that are ASTA or BSI approved to BS 1362 and with a rated current of 13 amps should be used. If there is a fuse cover fitted, this cover must be refitted after changing the fuse. If the fuse cover is lost or damaged, the plug must not be used. Spare fuse holders and fuses are available from electrical outlets. If the socket outlets in your home are not suitable for the plug of this product, the plug must be removed and disposed of safely as insertion of the plug into a socket is likely to cause electric hazard. A replacement plug should be wired according to the following instructions.

If in doubt, contact a qualified electrician.

IMPORTANT:

This appliance must be earthed. The wires in the cord set are coloured in the following way:

BLUE –NEUTRAL BROWN –LIVE GREEN & YELLOW –EARTH

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire that is coloured green & yellow must be connected to the terminal in the plug that is marked with the letter E or by the earth symbol or coloured green or green & yellow or marked with symbol: ⏚

The wire that is coloured blue must be connected to the terminal that is marked with the letter N or coloured black.

The wire that is coloured brown must be connected to the terminal that is marked with the letter L or coloured red.

If the supply cord is damaged, the manufacturer or its service agent or a similarly qualified person must replace it in order to avoid a hazard.

We reserve the right to amend specification as part of our policy of continual product improvements. All sizes, weights, dimensions, temperatures, times, consumption figures are approximate only.

The ‘crossed-out wheeled bin’ symbol indicates that this product can be recycled. Do not dispose of with the household waste. To protect the environment take it to your local council’s collection site.

WARRANTY

Your new product has a warranty of 12 months from the date of consumer purchase. Please keep your receipt as it will be required as proof of date of purchase. This warranty only applies if the item has been used solely for household use in the UK or Ireland, and all instructions have been followed properly. Abuse of your appliance, or failure to descale (where appropriate) or use of the incorrect water will invalidate the warranty. Returned goods cannot be accepted unless repacked properly within the original packaging, and presented with the original receipt. This does not affect your statutory rights.

In the event of service query, please contact us on 0121 693 9221 or 0044 121 693 9221 if outside the UK, where we will be pleased to help; or via e-mail on gs5@teamuki.com

Issue 2 20120615

efbe-Schott®

Garment Steamer

GS 5
230V~50Hz,
1500W

CE

IMPORTANT SAFEGUARDS

- Read all instructions before use.
- Do not touch hot surfaces; use handles or knobs.
- To protect against electric shock, do not immerse cord, plug or appliance in water or any other liquid.
- Close supervision is necessary when appliance is used near children.
- Unplug from outlet when not in use and before cleaning. Allow the Steamer to cool before putting on or taking off parts. The Steamer only works when the unit is plugged in and the power switch is on.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries and invalidate any warranty you may have.
- Do not use outdoors, or on or near direct heat sources
- Do not let cord hang over edge of table or counter, or touch hot surfaces or come into contact with naked heat source.
- Do not overfill.
- Do not use this appliance for any use other than the intended use. This appliance is for household use only.
- Liquid or steam should not be directed towards equipment containing electrical components such as interiors of ovens
- This appliance is an attended appliance, and as such should never be left ON or whilst hot without adult supervision.
- The jet of steam emitted can be very powerful; so make sure it is not directed at persons, pets or delicate items.
- The Steamer's tank should be filled only with cool/cold water only after the unit is disconnected from the power supply. NEVER FILL THE TANK WITH HOT WATER.
- NEVER fill with boiled water, even if allowed to cool.
- The Steamer takes a few minutes to reach operating temperature. During this time, the Steamer head will become hot but not totally effective. You may hear the Steamer's heating system, this is entirely normal and not a cause for product returns.
- ALWAYS empty the water from the Steamer after use.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

BEFORE USE

Check that the voltage of the appliance corresponds to the mains voltage of your home. This appliance is fitted with an earth for extra safety. Remove all packaging from the Garment Steamer.

Your new Garment Steamer is an attended appliance, and as such should not be left operating unattended.

KNOW YOUR NEW GARMENT STEAMER

Steam head, gets hot in use
Steam handle
Hanger for shirts, blouses; integral cradle for Steam handle
Steam hose, gets hot in use
Locking clasp of telescopic pole (2 in total)
Telescopic pole
Detachable water tank; lift out, fill from underside with cool water only..**never use boiled water**
Knurled fastener for telescopic pole assembly
Knurled fastener for steam hose assembly
On/Off
Drain plug for draining water from the body, once tank is removed.

Picture is representative only, may differ slightly in detail from contents of your box.

ASSEMBLE YOUR NEW GARMENT STEAMER

Check that you have unpacked all the items in the box and safely removed all the packaging (some items are packed in the polyfoam). There may be some water residue in the tank from Quality Control processes at the factory. This is not a cause for concern or return.

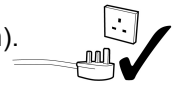

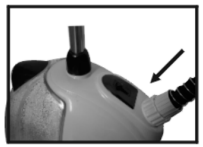

Fit the steam hose, there is a ridge on the hose that aligns with a slot, push in then turn anti clockwise.

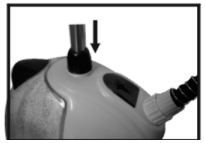

Loosen the nut; fit the telescopic tube assembly, there is a ridge on the tube that aligns with a slot, push in then turn anti clockwise. Then tighten the nut clockwise.

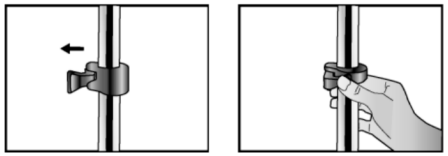

Adjust the tubes for height, open the clips, adjust the height then close the clasp to secure the tubes.

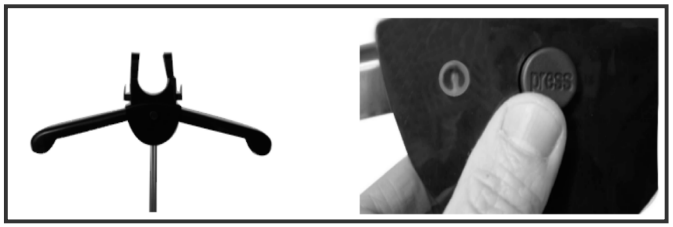

Fit the hanger to the tube, then press the button and the hanger arms will open out.

Note the Steam Handle cradle in place.

Your Garment Steamer comes with a trouser crease tool, long bristle steam tool and pad steam tool. **ALWAYS fit these when the Steam Handle is cool**. The trouser crease tool fits on to the tab on the Steam handle underside, the handle spring loaded against the Steam handle; the other tools clip on the top of the handle, there is a recess. **ALWAYS fit these when the Steam Handle is cool**.

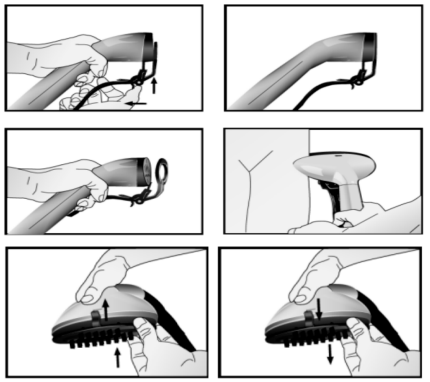

USING YOUR NEW GARMENT STEAMER

Detach the water tank (pull upwards) and on the underside is a knurled nut. Unscrew this and add water…then refasten the knurled nut and fit into the base of the Garment Steamer. It will only fit in one way.

NEVER use boiled water, NEVER use hot water. ALWAYS use cool water and, if you are in a hard water area (if your kettle furs up, this applies to you), we recommend that you use filtered water – see separate order form for our filter jug offer. You will not be covered by our warranty if you don't follow this advice.

Ensure the Steam handle is in its cradle, then connect the power supply and switch on. After a few moments, you will see and hear the steam.

Fit the shirt/blouse to the hanger and, gripping and gently pulling the lower edge of the front/rear panel or sleeve whilst steaming will deliver the best, fastest results. You can steam the detail features like pockets and collars.

Steaming hanging draperies will help de-odourise and also will aid sanitizing.

Your new Garment Steamer comes with a trouser crease tool and 2 brushed steam tools. **ALWAYS FIT THESE WHEN THE STEAM HANDLE IS COOL.**

LOOKING AFTER YOUR NEW GARMENT STEAMER

ALLOW THE STEAM HANDLE AND THE WATER IN THE BODY TO COMPLETELY COOL BEFORE STORAGE.

Always empty the Water Tank when not in use – lift the water tank from the body, pour any remaining water out from the underside filler. There may be some water remaining in the body cavity – this is normal. Wait for it to be completely cool before carefully pouring away from the drain plug located on one side, by the wheel, into a bowl. **REMEMBER** – this water may still be hot.

Always neatly wrap the power cord but not tightly, do not let the plug stay in the water tank cavity. Refit the tank, store in a level orientation.

HELP! I THINK MY NEW GARMENT STEAMER HAS GONE WRONG.

I OPENED THE BOX AND THERE IS SOME WATER IN THE TANK.
There may be some water residues from our QC processes, and this is not a cause for concern or return.

I SWITCH IT ON BUT NOTHING HAPPENS Is the plug connected correctly? Have you got water in the tank? If it's the first use, it can take up to 5-minutes for the steam system to become wholly functional.

I ACCIDENTALLY USED THE GARMENT STEAMER WITH NO WATER. HAVE I DAMAGED THE STEAM STEAMER? The Steam Steamer is fitted with an automatic safety system, and in the event of dry use it will operate to cut the power, although the unit will get hot until the temperature that triggers the safety devices is reached. Switch off and leave to cool before correct re-use.

I CAN HEAR THE MOTOR WORKING BUT NO STEAM COMES OUT
Check you have water in the tank AND it is fitted correctly. If you haven't used the Garment Steamer for some time, it will take a few minutes to get up to steam. There may be a small degree of water spit from the Steam handle before first use, this is entirely normal, Ensure the Steam hose is not kinked – note that this gets hot in use.

I WAITED UNTIL STEAM IS AVAILABLE BUT WATER, NOT STEAM, COMES OUT THE STEAMER HEAD Steam can remain in the system from previous use, this may condense back to liquid state from steam state. This water may remain inside until the next use, and it may be ejected as water at the outset of the new steaming session. This is normal and is not a cause for concern or return.

WHERE CAN I GET ACCESSORIES? Please use the order form enclosed or seek the Steam Cleaner Spares section on our internet shop, accessed from our website www.teamuki.com or you can call us on 0121 693 9221

efbe-Schott® You may like to order some spare parts for your new Garment Steamer GS 5

Please use the order form below, selecting the currency most applicable to your country of residence, and return with your remittance made payable to

Team UKI Ltd at
efbe-schott Customer Services, c/o Team UKI Ltd.,
405 The Custard Factory,
Gibb Street, Birmingham B9 4AA, UK
Please allow 28 days for delivery. *Thank you*

Item	Price	Quantity	Total
Hanger assy	£ 9.95		
Hanger assy	€ 13.00		
Steam handle tool (specify)	£ 7.95		
Steam handle tool (specify)	€ 11.00		
Water Tank	£ 9.95		
Water Tank	€ 13.00		
Total includes VAT and P&P within mainland UK. For Channel Isles please add £ 2.90 carriage			

Your name……..
Your address……
……
……
……
Your telephone number:……..

Have you remembered to enclose a cheque/postal order?
Have you remembered your name and daytime delivery address?
Have you made your cheque payable to Team UKI Ltd?